

Control Wiring Diagram

Table of contents


1.YV100X

- Overall connections diagram
- Emergency stop circuit diagram
- Power supply circuit diagram
- I/O wiring diagram(HEAD)
- I/O wiring diagram(CONVEYOR A)
- I/O wiring diagram(CONVEYOR B)
- Controller connections diagram
- Transtap switching diagram
- Air circuit(YV100X-F)
- Air circuit(YV100X-S)
- Harness parts list


2.YV88X

- Overall connections diagram
- Emergency stop circuit diagram
- Power supply circuit diagram
- I/O wiring diagram(HEAD)
- I/O wiring diagram(CONVEYOR A)
- I/O wiring diagram(CONVEYOR B)
- Controller connections diagram
- Transtap switching diagram
- Air circuit(YV88X-F)
- Air circuit(YV88X-S)
- Harness parts list


Emergency stop circuit diagram

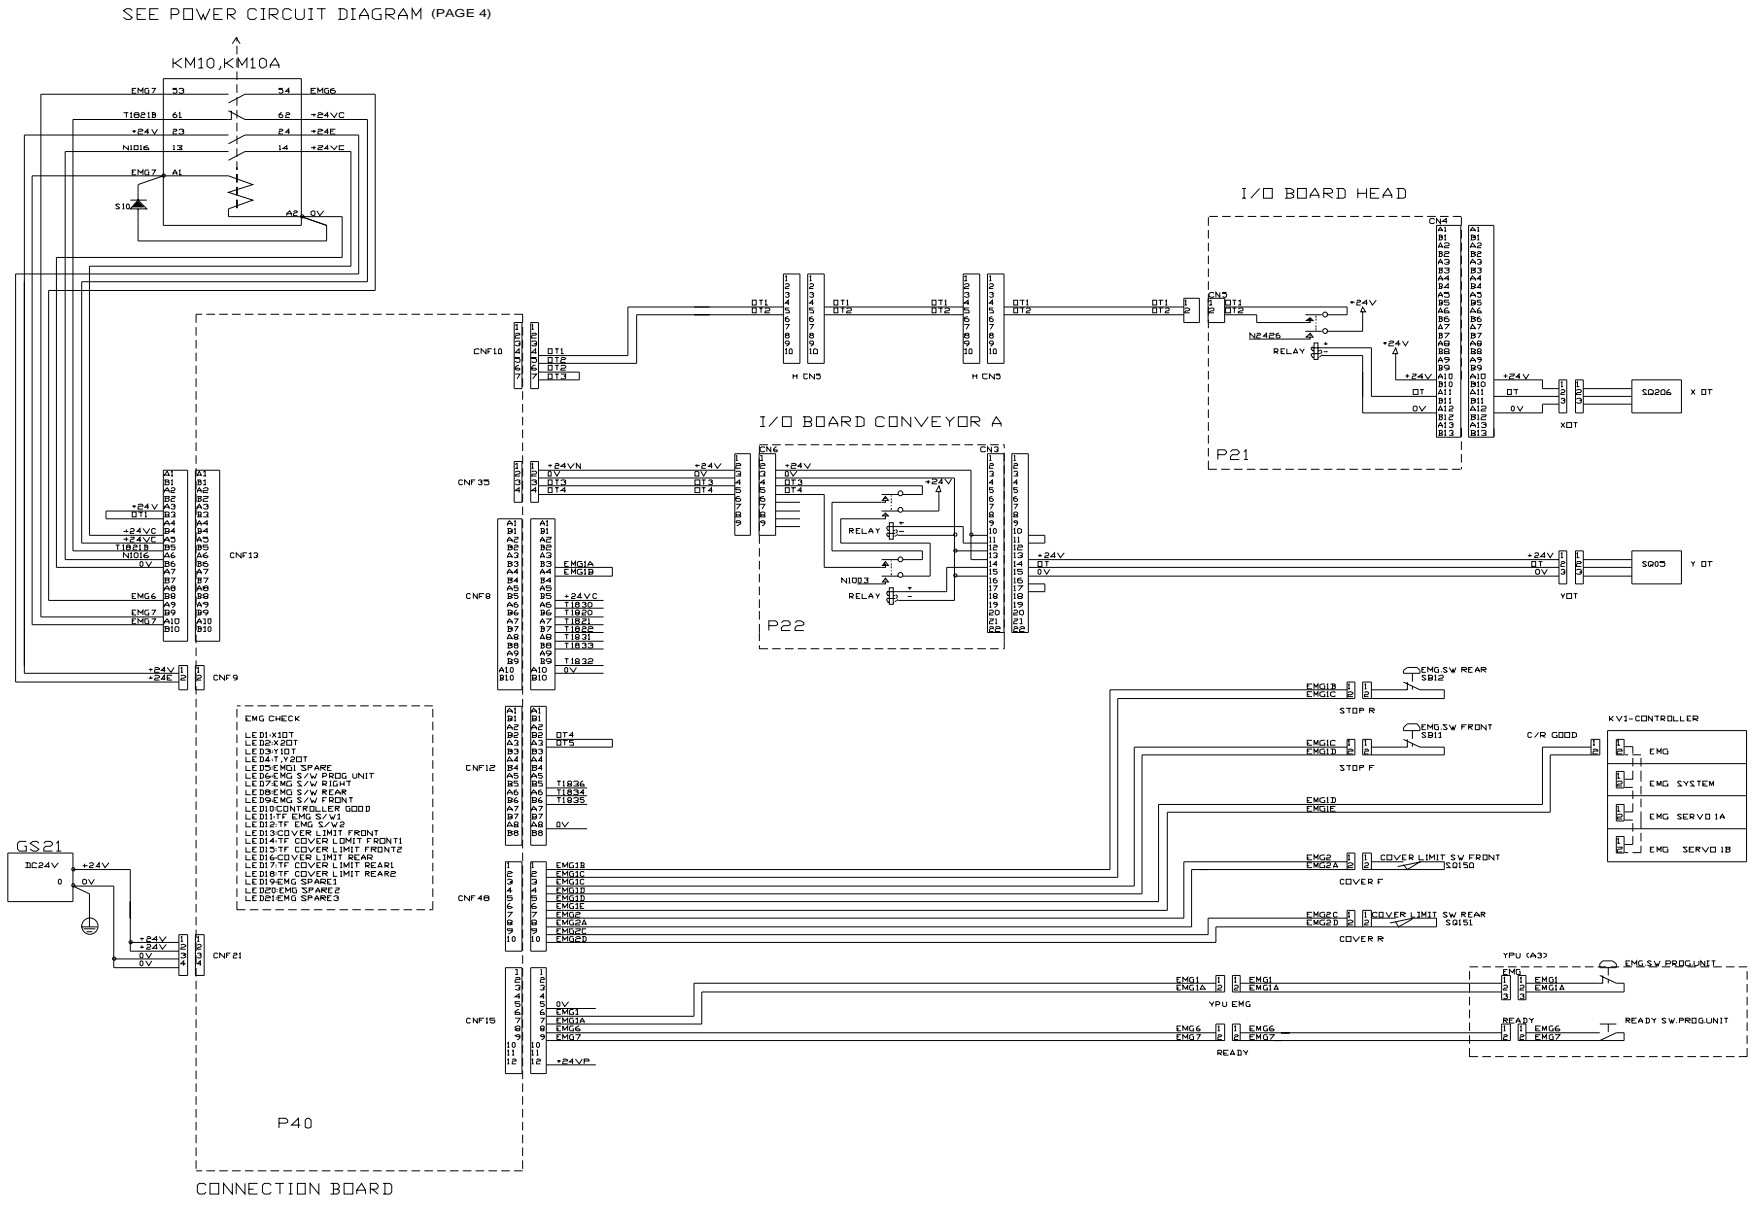


Power supply circuit diagram

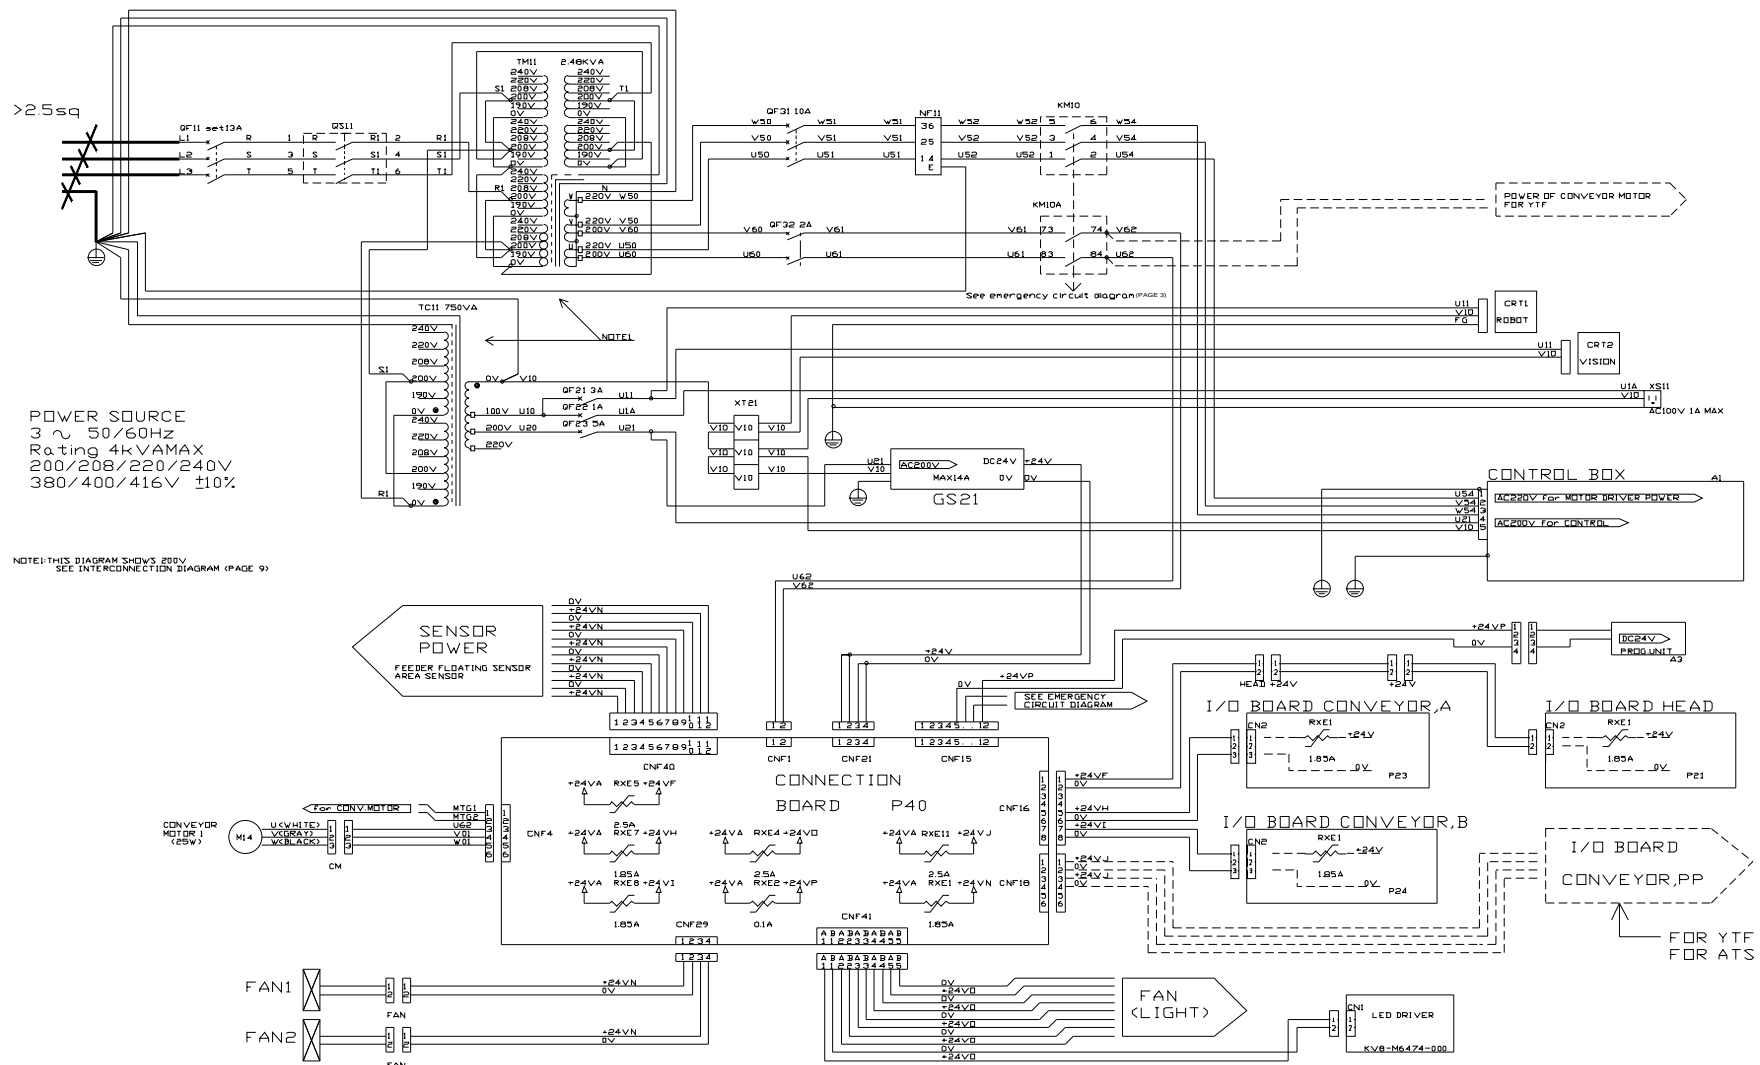

I/O wiring diagram (CONVEYOR B)

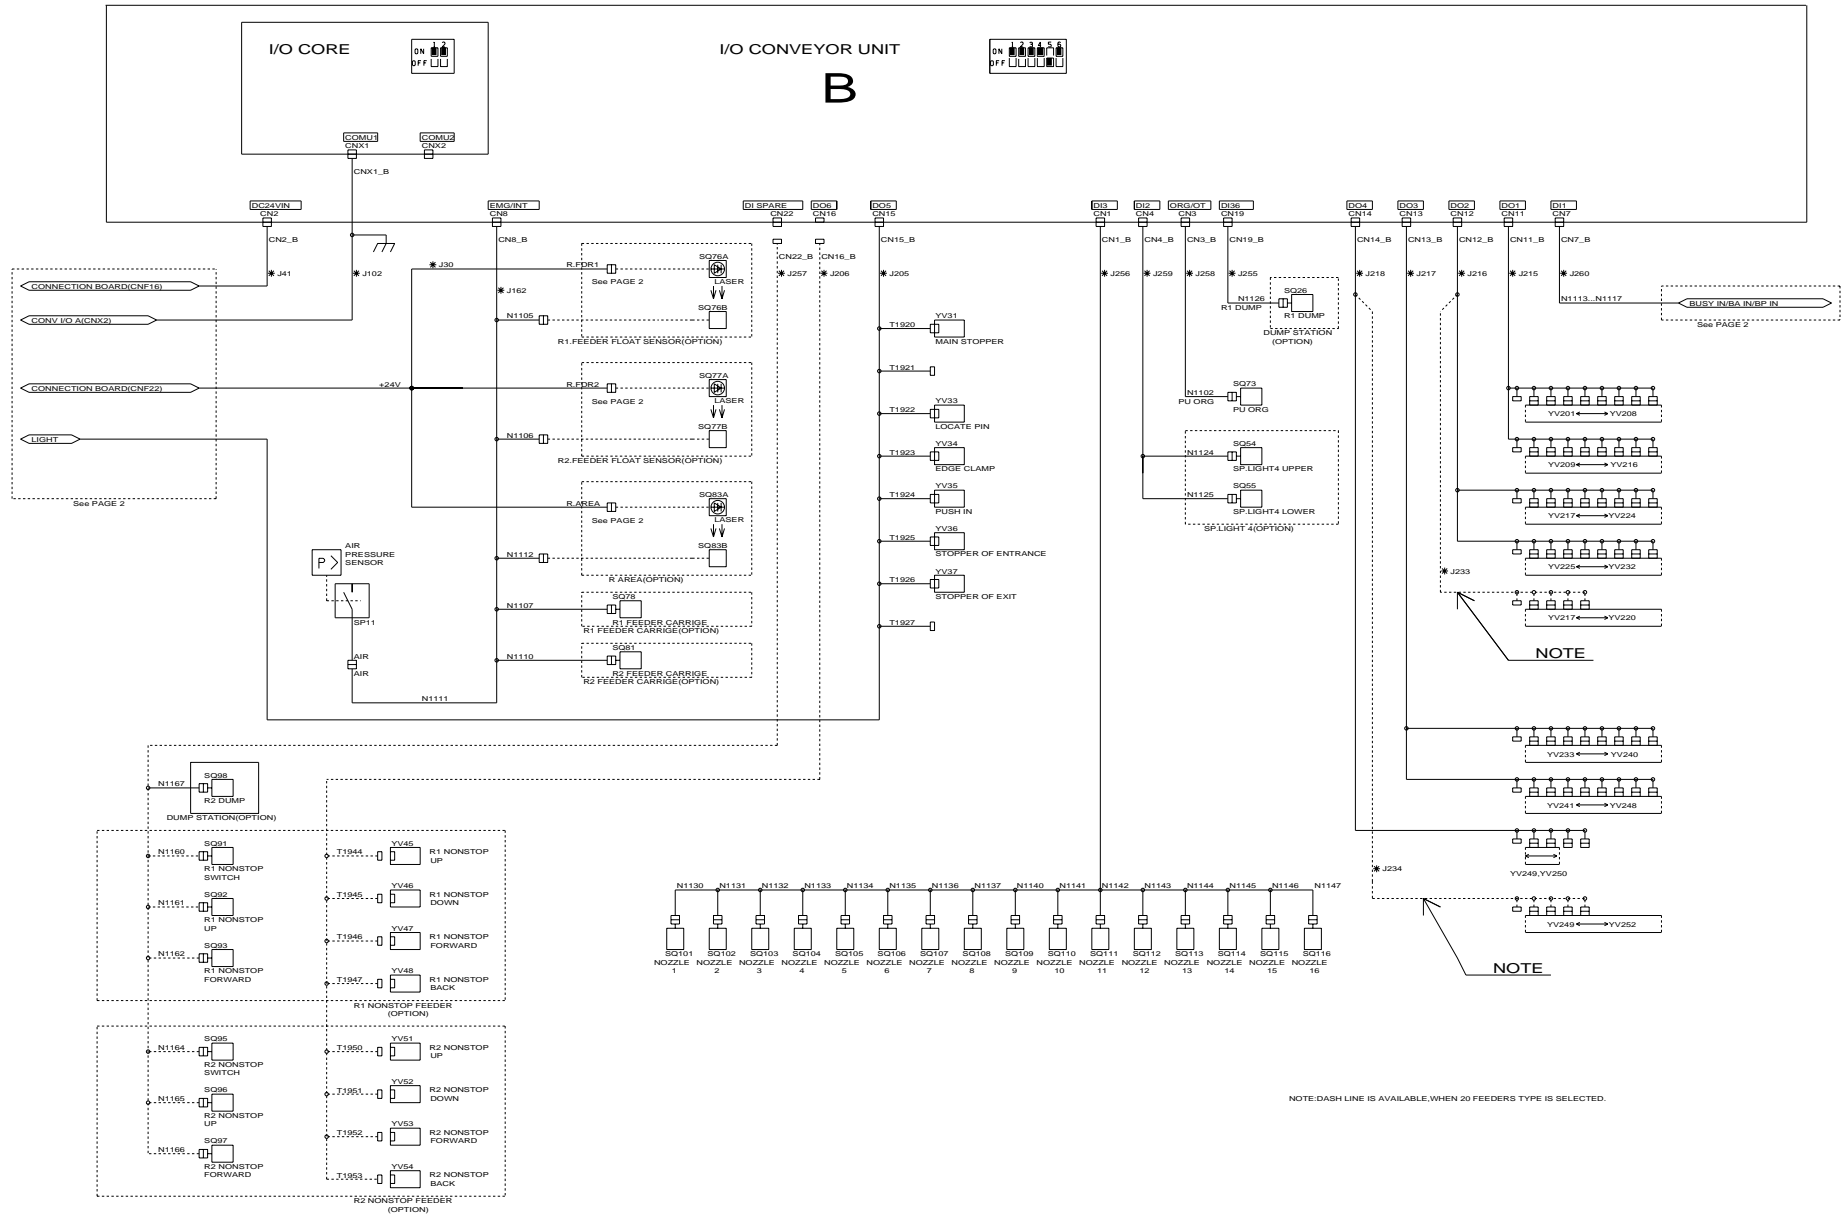


Controller connections diagram

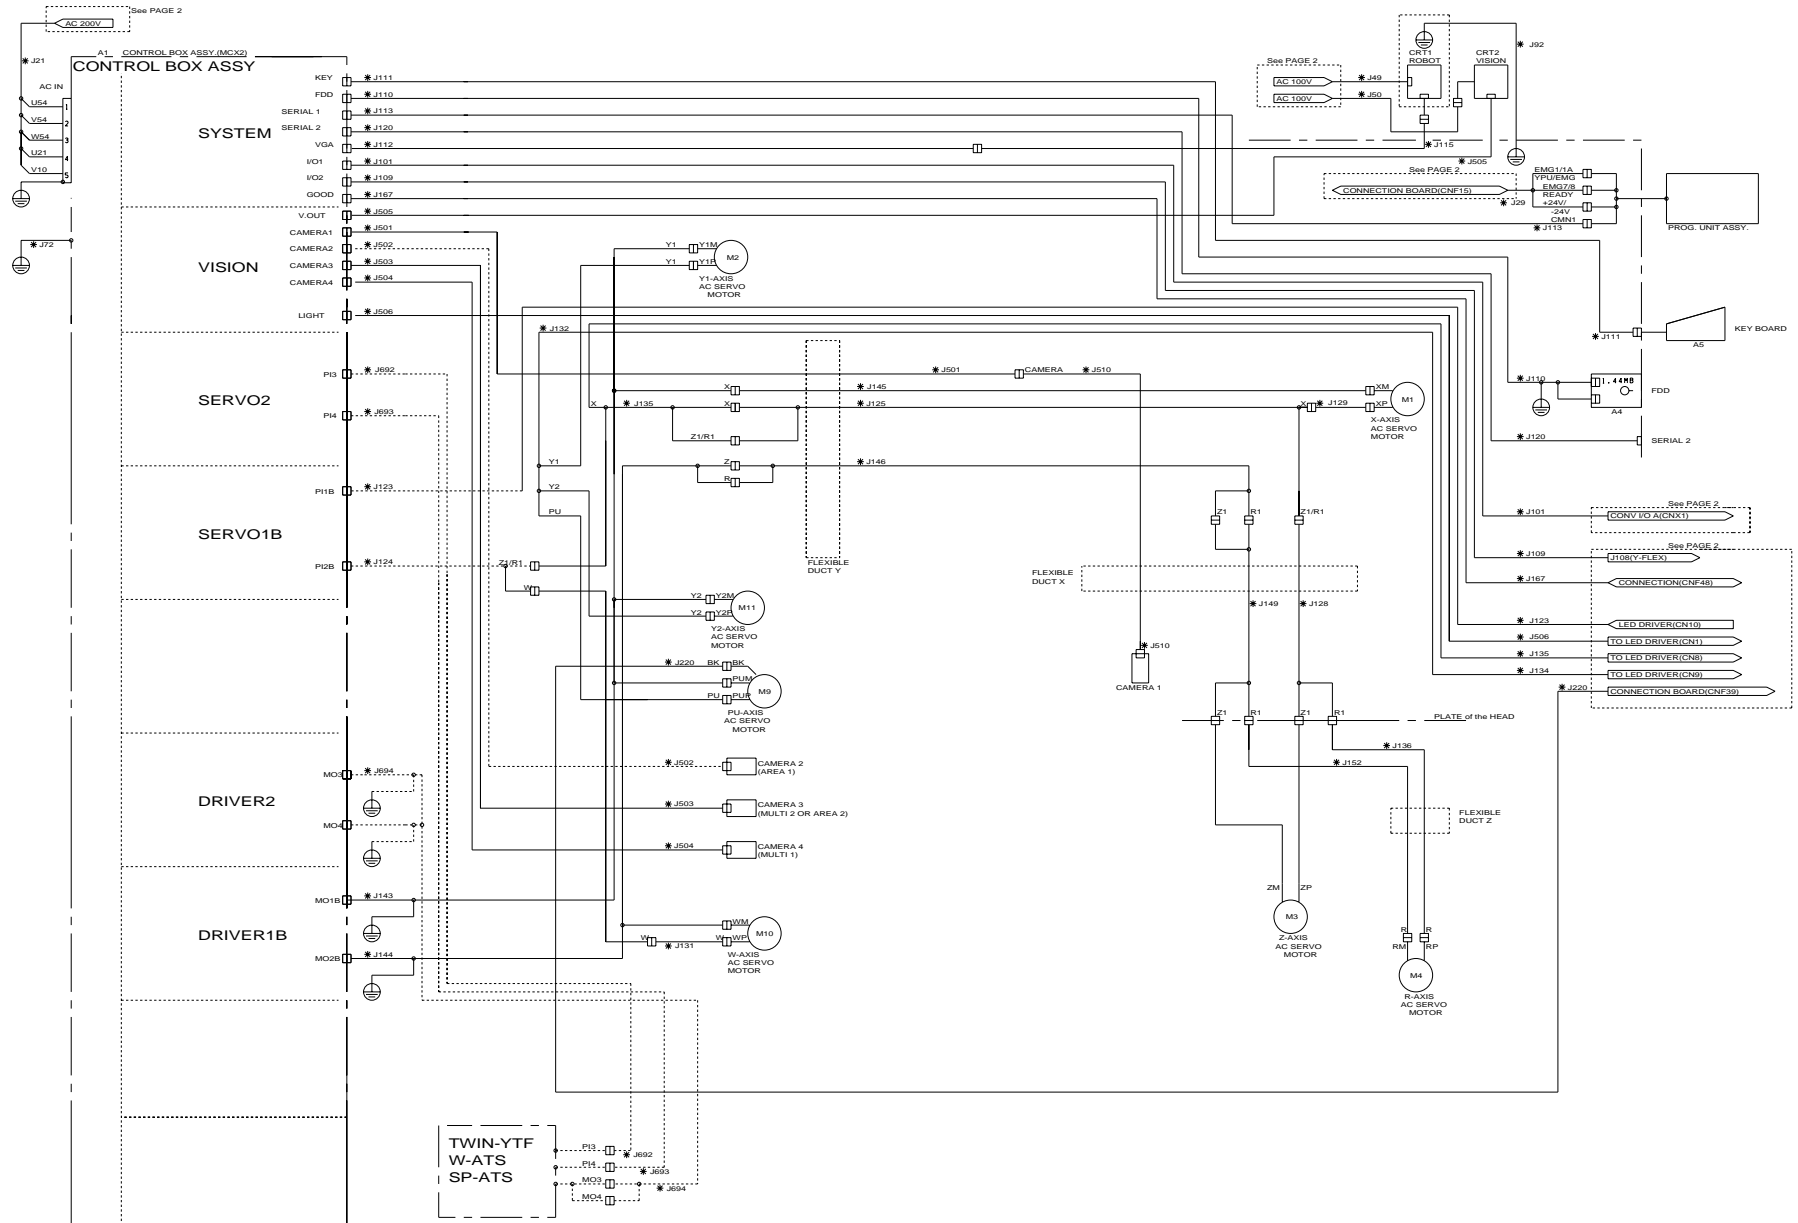


Transtap switching diagram


TM11: The selection of POWER SOURCE

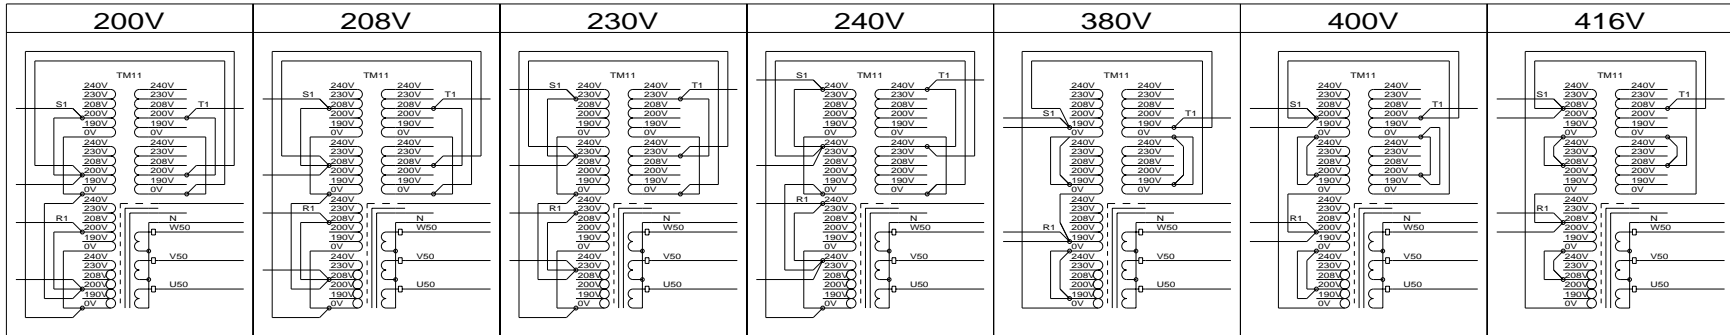

TC11: The selection of POWER SOURCE

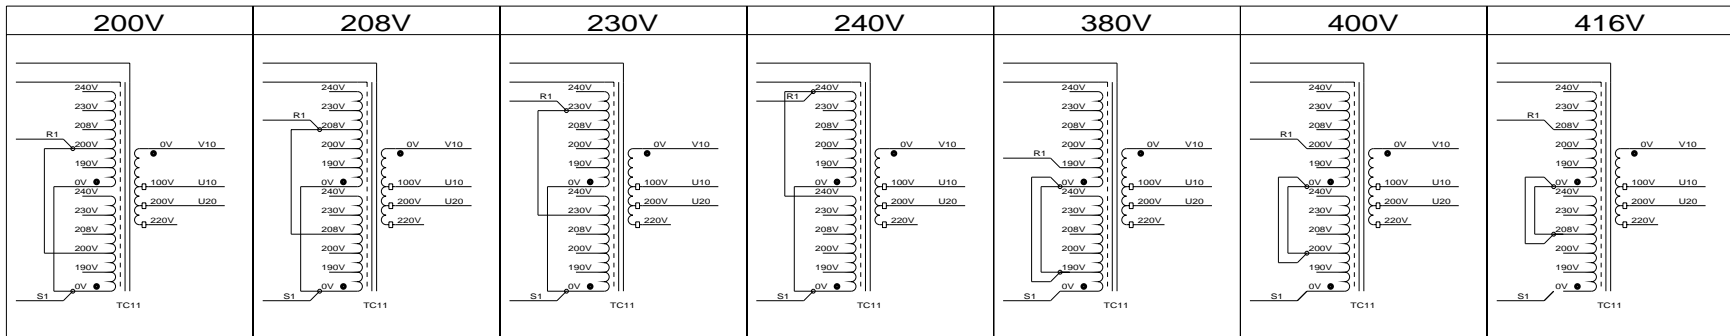


Air circuit (YV100X-F)

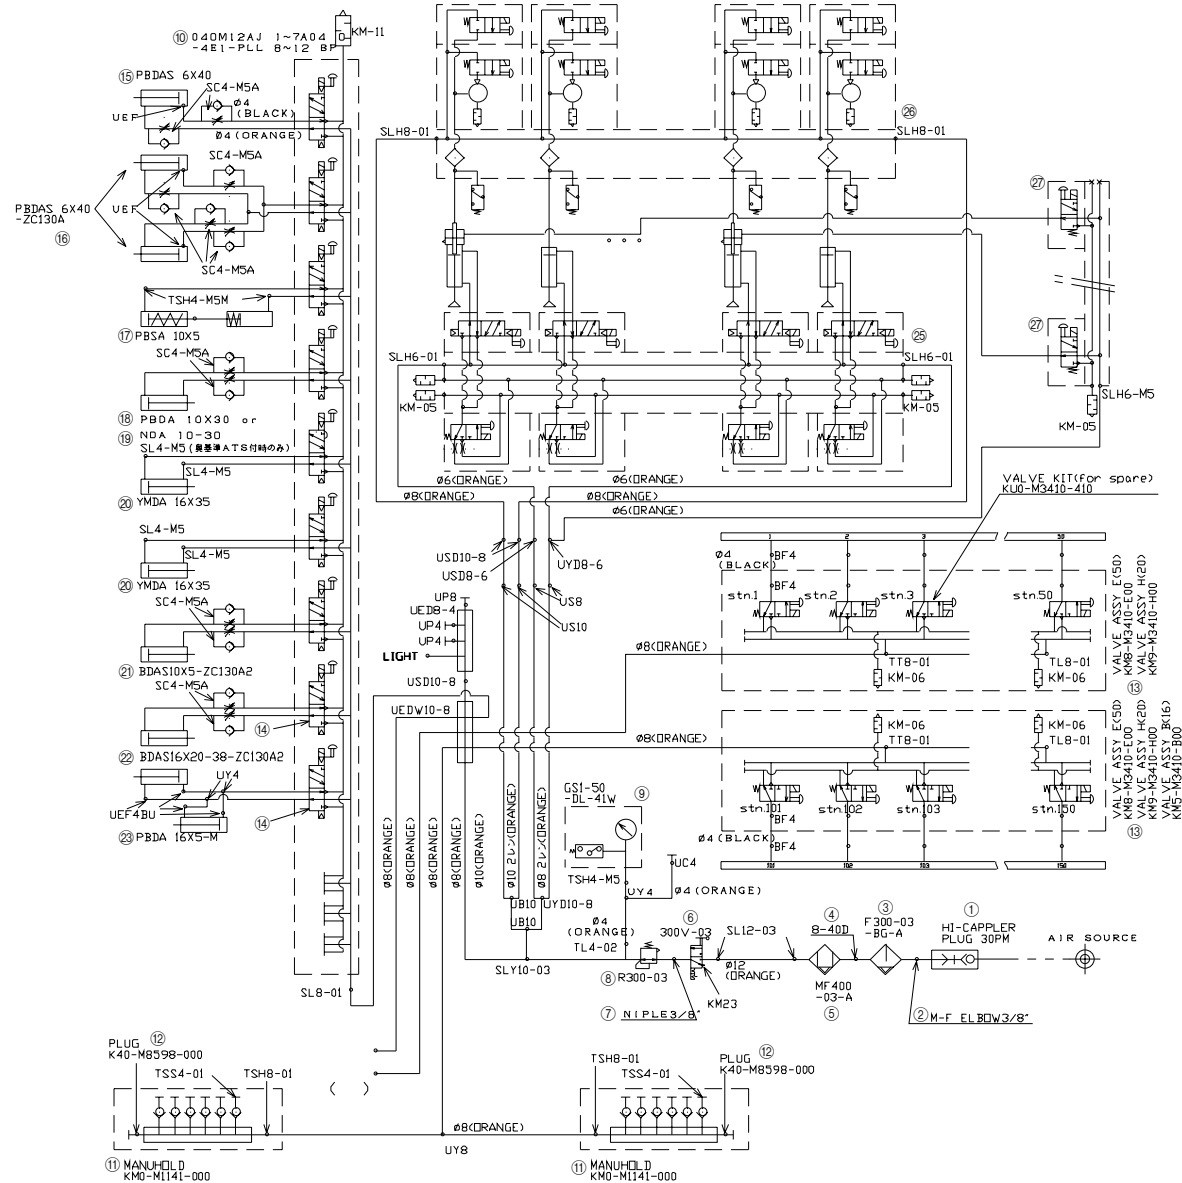

27	KV8-M71VA-000	VALVE CLUTCH	4	KOGANEI
26	KV8-M7163-000	MICRO EJECTOR	1	KOGANEI
25	KV8-M7162-000	SOLENOID VALVE	1	KOGANEI
23	KV7-M9269-000	CYLINDER	2	PBDA 10X5-M KOGANEI
22	KM1-M9611-020	CYLINDER,U/D	1	BDAS 16X20 KOGANEI
21	KM1-M9605-020	CYLINDER,CLAMP	1	BDAS 10X5 KOGANEI
20	KV7-M9283-000	CYL.,YMDA16X35	2	YMDA 16X35 KOGANEI
19	KV8-M922E-000	CYLINDER	1	NDA 10X30 KOGANEI
18	KV7-M9229-000	CYLINDER	1	PBDA 10X30 KOGANEI
17	KV7-M9237-000	CYLINDER PBSA10X5	2	PBSA 10X5 KOGANEI
16	KV7-M9179-A00	CYLINDER-ASSY	2	PBDAS 6X40 KOGANEI
15	KV7-M9165-000	CYLINDER PBDAS6X40	2	PBDAS 6X40 KOGANEI
14	KG2-M8582-400	VALVE(SPARE)	2	R300-03 KOGANEI
13	KM-M3410-M00	VALVE ASSY *	*	KOGANEI
12	K40-M8598-000	PLUG I (R 1/8)	2	
11	KM0-M1141-000	MANIFOLD	2	
10	KM0-M8582-000	VALVE	1	KOGANEI
9	KG7-M8596-002	PRESSURE GAUGE	1	GS1-50-0L-41W KOGANEI
8	KG7-M8504-001	REGULATOR	1	R300-03 KOGANEI
7	KH5-M8531-000	FITTING 1	1	3/8" NIPPLE
6	KH5-M8501-000	EXHAUST VALVE	1	300V-03 KOGANEI
5	KV8-M8502-000	MIST FILTER	1	MF400-03-A KOGANEI
4	KV8-M8503-000	MODULE ADAPTER	1	8-400 KOGANEI
3	KG7-M8501-000	AIR FILTER	1	F300-03-BG-A KOGANEI
2	KG7-M8513-000	JOINT	1	3/8" M-F ELBOW
1	KG7-M8512-000	JOINT	1	30PM NITTO

Air circuit (YV100X-S)

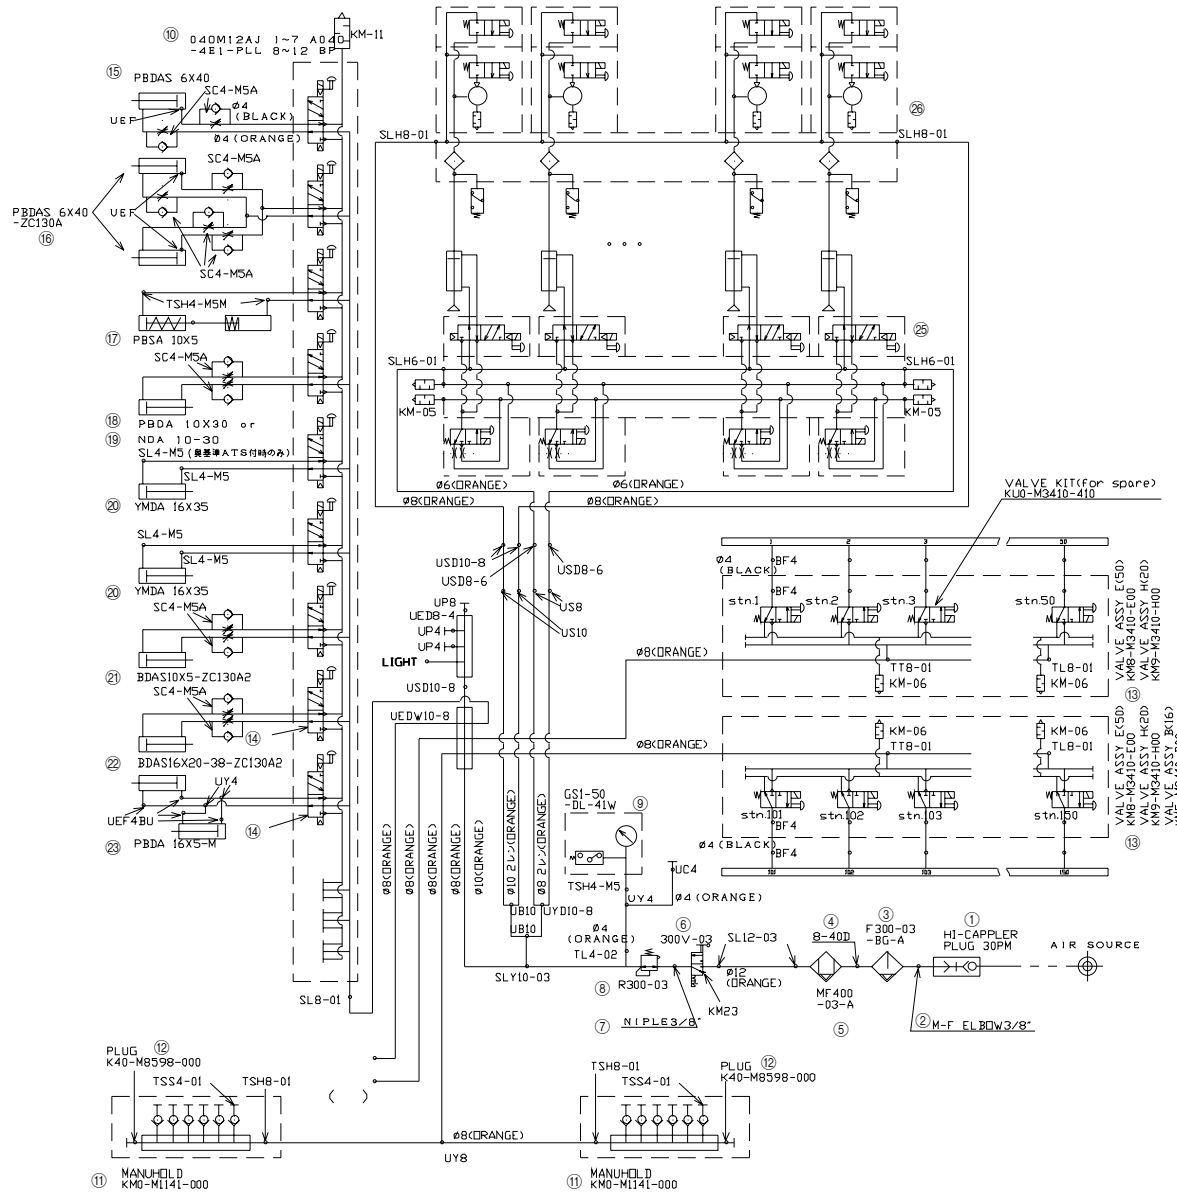


26	KVB-M7163-000	MICRO EJECTOR	1	KOGANE I
25	KVB-M7162-000	SOLENOID VALVE	1	KOGANE I
23	KV7-M9269-000	CYLINDER	2	PBDA 10X5-M KOGANE I
22	KM1-M9611-020	CYLINDER,U/D	1	BDAS 16X20 KOGANE I
21	KM1-M9605-020	CYLINDER,CLAMP	1	BDAS 10X5 KOGANE I
20	KV7-M9283-000	CYL.,YMDA16X35	2	YMDA 16X35 KOGANE I
19	KVB-M922E-000	CYLINDER	1	NDA 10X30 KOGANE I
18	KV7-M9229-000	CYLINDER	1	PBDA 10X30 KOGANE I
17	KV7-M9237-000	CYLINDER PBDA10X5	2	PBSA 10X5 KOGANE I
16	KV7-M9179-A00	CYLINDER,ASSY	2	PBDAS 6X40 KOGANE I
15	KV7-M9165-000	CYLINDER PBDAS6X40	2	PBDAS 6X40 KOGANE I
14	KG2-M8582-400	VALVE(SPARE)	2	R300-03 KOGANE I
13	KM*-M3410-*00	VALVE ASSY *	*	KOGANE I
12	K40-M8598-000	PLUG I (R 1/8)	2	
11	KM0-M1141-000	MANUFOLD	2	
10	KM0-M8582-000	VALVE	1	KOGANE I
9	KG7-M8596-002	PRESURE GAUGE	1	GS1-50-DL-41W KOGANE I
8	KG7-M8504-001	REGULATOR	1	R300-03 KOGANE I
7	KH5-M8531-000	FITTING I	1	3/8" NIPLE
6	KH5-M8501-000	EXHAUST VALVE	1	300V-03 KOGANE I
5	KVB-M8502-000	MIST FILTER	1	MF400-03-A KOGANE I
4	KVB-M8503-000	MODULE ADAPTER	1	8-400 KOGANE I
3	KG7-M8501-000	AIR FILTER	1	F300-03-BG-A KOGANE I
2	KG7-M8513-000	JOINT	1	3/8" M-F ELBOW
1	KG7-M8512-000	JOINT	1	30PM NITTO

No	Part No.	Part Name	Q'ty	Remarks
1	KG2-M536A-01X	HNS 301 (FG 450)	1	J82
2	KG2-M536A-22X	HNS,PE 150	6	J83-J88
3	KG2-M663R-00X	HNS 3-11 :J61/J62	2	J61,J62
4	KG2-M664H-00X	HNS 4-5 (SERIAL1)	1	J113
5	KG2-M669G-01X	HNS,9-4	1	J202
6	KH1-M536E-32X	HNS 302 (FG 850 FLEX	1	J92,J93
7	KH4-M664L-03X	HNS 4-8 (FDD)	1	J110
8	KH4-M664N-01X	HNS,4-10(SERIAL2)	1	J120
9	KH4-M668R-00X	HNS 8-11 (SW LIMIT C	2	J163,J164
10	KV8-M668R-10X	HNS,8-11(DI 6B)	1	
11	KH5-M536E-11X	HNS 302 (FG 500 FLEX	1	J74
12	KK1-M664J-01X	HNS,PE 1000	5	J77-J80,J89
13	KK1-M667E-00X	HNS 7-2 (SW EMG)	2	J165,J166
14	KM0-M536A-01X	HNS,PE 70	2	J90,J91
15	KM5-M661E-00X	HNS,1-2 (QF11-TM11)	1	J3
16	KM5-M661Y-00X	HNS,1-17 (PWR,CRT)	1	J50
17	KM5-M662K-00X	HNS,2-7 (CNECT,CNF15	1	J29
18	KM6-M661G-00X	HNS,1-4 (TM11-TC11)	1	J4
19	KM6-M661J-00X	HNS 1-6 (TM11-QF31)	1	J14
20	KM6-M661K-00X	HNS 1-7 (QF31-NF11)	1	J15
21	KM6-M661L-00X	HNS 1-8 (NF11-KM11)	1	J18
22	KM6-M661Y-00X	HNS,POWER CRT	1	J49
23	KM6-M66L2-03X	HNS,PE 1600	1	J81
24	KM6-M66M1-10X	HNS 18-1 (TAP CHANGE	10	J601-J608,J610,J611
25	KM6-M66M1-20X	HNS 18-1 (TAP CHANGE	1	J609
26	KM6-M66M4-00X	HNS 18-4 (JUMPER)	2	J612,J613
27	KU0-M663N-00X	HNS,3-10 (CAPACITOR)	1	J52
28	KV0-M664M-00X	HNS 4-9	1	J111
29	KV5-M536E-30X	HNS 302 (F_PE,1000)	1	J94
30	KV7-M661H-00X	HNS 1-5(TC11-QF**,XT	1	J11
31	KV7-M662A-01X	HNS,2-1(SENSOR POWER	1	J30
32	KV7-M662Y-00X	HNS 2-17(CONN,CNF21)	1	J48
33	KV7-M663M-00X	HNS 3-9(CONNECT,CNF4	1	J58
34	KV8-M536E-10X	HNS 302	2	J71,J73
35	KV8-M661J-00X	HNS 1-6(TM11-QF32)	1	J16
36	KV8-M661N-00X	HNS,1-10(QF40-KM10A)	1	J19
37	KV8-M661R-00X	HNS 2-11(OUTLET)	1	J26
38	KV8-M661U-00X	HNS,CNF16	1	J41


No	Part No.	Part Name	Q'ty	Remarks
39	KV8-M661V-00X	HNS 1-14(PWR,HEAD I/	1	J43
40	KV8-M661W-00X	HNS 1-15	1	J44
41	KV8-M662A-00X	HNS,2-1(KM12,QF22,XT	1	J21
42	KV8-M662G-00X	HNS 2-4(CONNECT,CNF1	1	J24
43	KV8-M662N-00X	HNS,CONNECT CNF10	1	J170
44	KV8-M662R-00X	HNS,2-11(OT,HEAD)	1	J171
45	KV8-M662T-00X	HNS 2-12	1	J172
46	KV8-M662X-00X	HNS,2-16(PWR,IO)	1	J47
47	KV8-M663A-00X	HNS,3-1 (PWR,MTR)	1	J51
48	KV8-M663T-00X	HNS SPEED CONTROL	1	J63
49	KV8-M664A-00X	HNS 4-1(CMN,I/O CV A	1	J101
50	KV8-M664E-01X	HNS,4-2(CMN,HEAD)	1	J109
51	KV8-M664F-00X	HNS 4-3(CMN,I/O AB)	1	J102
52	KV8-M664G-00X	HNS 4-4	1	J114
53	KV8-M664J-00X	HNS 4-6(I/O CMN Y-FL	1	J108
54	KV8-M665F-10X	HNS,5-3	1	J123
55	KV8-M665G-00X	HNS 5-4	1	J124
56	KV8-M665J-00X	HNS 5-6	1	J125
57	KV8-M665K-00X	HNS 5-7(X-BEAM,PI X)	1	J129
58	KV8-M665L-00X	HNS 5-8	1	J128
59	KV8-M665M-00X	HNS 5-9(PI W)	1	J131
60	KV8-M665U-10X	HNS,5-13	1	J135
61	KV8-M665U-00X	HNS,5-13(PI X,Z1,R1)	1	
62	KV8-M665U-20X	HNS,PI_X_EXT	1	
63	KV8-M665V-10X	HNS,5-14	1	J134
64	KV8-M666F-00X	HNS,6-3	1	J143
65	KV8-M666G-00X	HNS 6-4	1	J144
66	KV8-M666H-00X	HNS,6-5(Y-FLEX XM)	1	J145
67	KV8-M666J-00X	HNS 6-6	1	J146
68	KV8-M666L-00X	HNS 6-8	1	J149
69	KV8-M667A-00X	HNS,7-1 (INT,A)	1	J161
70	KV8-M667E-00X	HNS,7-2 (INT,B)	1	J162
71	KV8-M667F-00X	HNS 7-3(EMG)	1	J167
72	KV8-M667G-00X	HNS 7-4(Y1 OT)	1	J168
73	KV8-M667L-00X	HNS,7-8	1	J22
74	KV8-M668A-01X	HNS,8-1(DI,CONV)	1	J181
75	KV8-M668E-01X	HNS,D0 1A	1	J252
76	KV8-M668F-00X	HNS,8-3(DI,DUMP 1/2)	2	

No	Part No.	Part Name	Q'ty	Remarks	No	Part No.	Part Name	Q'ty	Remarks
77	KV8-M668G-XXX	HNS,DI DUMP SEL.	2		115	KH2-M661G-101	HNS,1-4	1	J693
78	KV8-M668G-20X	HNS,8-4(DI,DUMP 3/4)	2		116	KV5-M661H-000	HNS 1-5(MO3)	1	J694
79	KV8-M668G-20X	HNS,8-4(DI,DUMP 3/4)	1		117	KV5-M661J-010	HNS 1-6(+24V PP CONN)	1	J695
80	KV8-M668J-01X	HNS,8-6	1	J220	118	KV5-M661K-000	HNS 1-7(MO4)	1	(J696:YTF80W)
81	KV8-M668L-01X	HNS,8-8(DI 2A)	1	J254	119	KV5-M663A-011	HNS,3-1(P.CONV MAIN)	1	(J697:YTF80W)
82	KV8-M668M-01X	HNS,NOZZLE STATION	1	J256	120	KV8-M66F0-00x	C.CAMERA ASSY L5M	1	J504/(J503):Multi
83	KV8-M668N-01X	HNS,DI 2B	1	J259	121	KM7-M66F0-00x	C.CAMARA ASSY L5M	1	J502/(J503):Area
84	KV8-M668T-00X	HNS 8-12(PU,ORG)	1	J258	122	KV7-M66F6-00x	C.CAMERA ASSY L7.7M	1	J501/J510:Camera 1
85	KV8-M668U-01X	HNS,8-13	1	J260	123	KV7-M66F2-00x	C.CAMARA ASSY L6M	1	J501
86	KV8-M669E-00X	HNS 9-2(PATLITE)	1	J219	124	KV7-M66F4-00x	C.CAMERA ASSY L1.7M	1	J510
87	KV8-M669J-00X	HNS,DO 5B	1	J205					
88	KV8-M669N-00X	HNS,9-10(DO CONNECTI	1	J203					
89	KV8-M669T-02X	HNS,DO 6	1	J204					
90	KH4-M66F5-01X	HNS,12-5 (VGA_4.5M)	1	J112,J115					
91	KU8-M66F5-30X	HNS,12-5 (VGA_3M)	1	J112					
92	KU8-M66F5-10X	HNS,12-5 (VGA_1.5M)	1	J115					
93	KV8-M66F6-00X	HNS 12-6	1	J505					
94	KV8-M66K8-01X	HNS,16-8(SMEMA PRE)	1	J222					
95	KV8-M66K9-02X	HNS,16-9	1	J201					
96	KV8-M66L1-00X	HNS 17-1(700)	1	J72					
97	KV8-M664K-00X	HNS,Z-FLEX CMN	1	J115					
98	KV1-M665T-00X	HNS,Z-FLEX RP	1	J136					
99	KV1-M666K-00X	HNS,Z-FLEX RM	1	J152					
100	KV8-M66A2-00X	HNS 10-2(EXT,HEAD)	1	J301					
101	KV8-M66A3-01X	HNS,10-3(DI HEAD)	1	J303					
102	KV8-M66A7-00X	HNS 10-7(LED1)	1	J310					
103	KV8-M66E1-00X	HNS 11-1(DO,HEAD)	1	J311					
104	KV8-M66E3-00X	HNS,11-3	1	J313					
105	KV8-M66E5-01X	HNS,11-5	1	J315					
106	KV8-M66E6-00X	HNS,11-6(I/O HEAD)	1	J318					
107	KV8-M66E7-00X	HNS,Z-FLEX OT	1	J173					
108	KV1-M66E8-00X	HNS,Z-FLEX +24V	1	J45					
109	KM6-M669W-00X	HNS,9-15	1	J506					
110	KV8-M669X-10X	HNS,9-16	1	J40					
111	KV5-M6601-000	HARNESS,1	1						
112	KH2-M661A-201	HNS 1-1 (EMG PP CONN)	1	J690					
113	KH2-M661E-001	HARNESS 1-2	1	J691					
114	KH2-M661F-101	HNS,1-3	1	J692					


Power supply circuit diagram

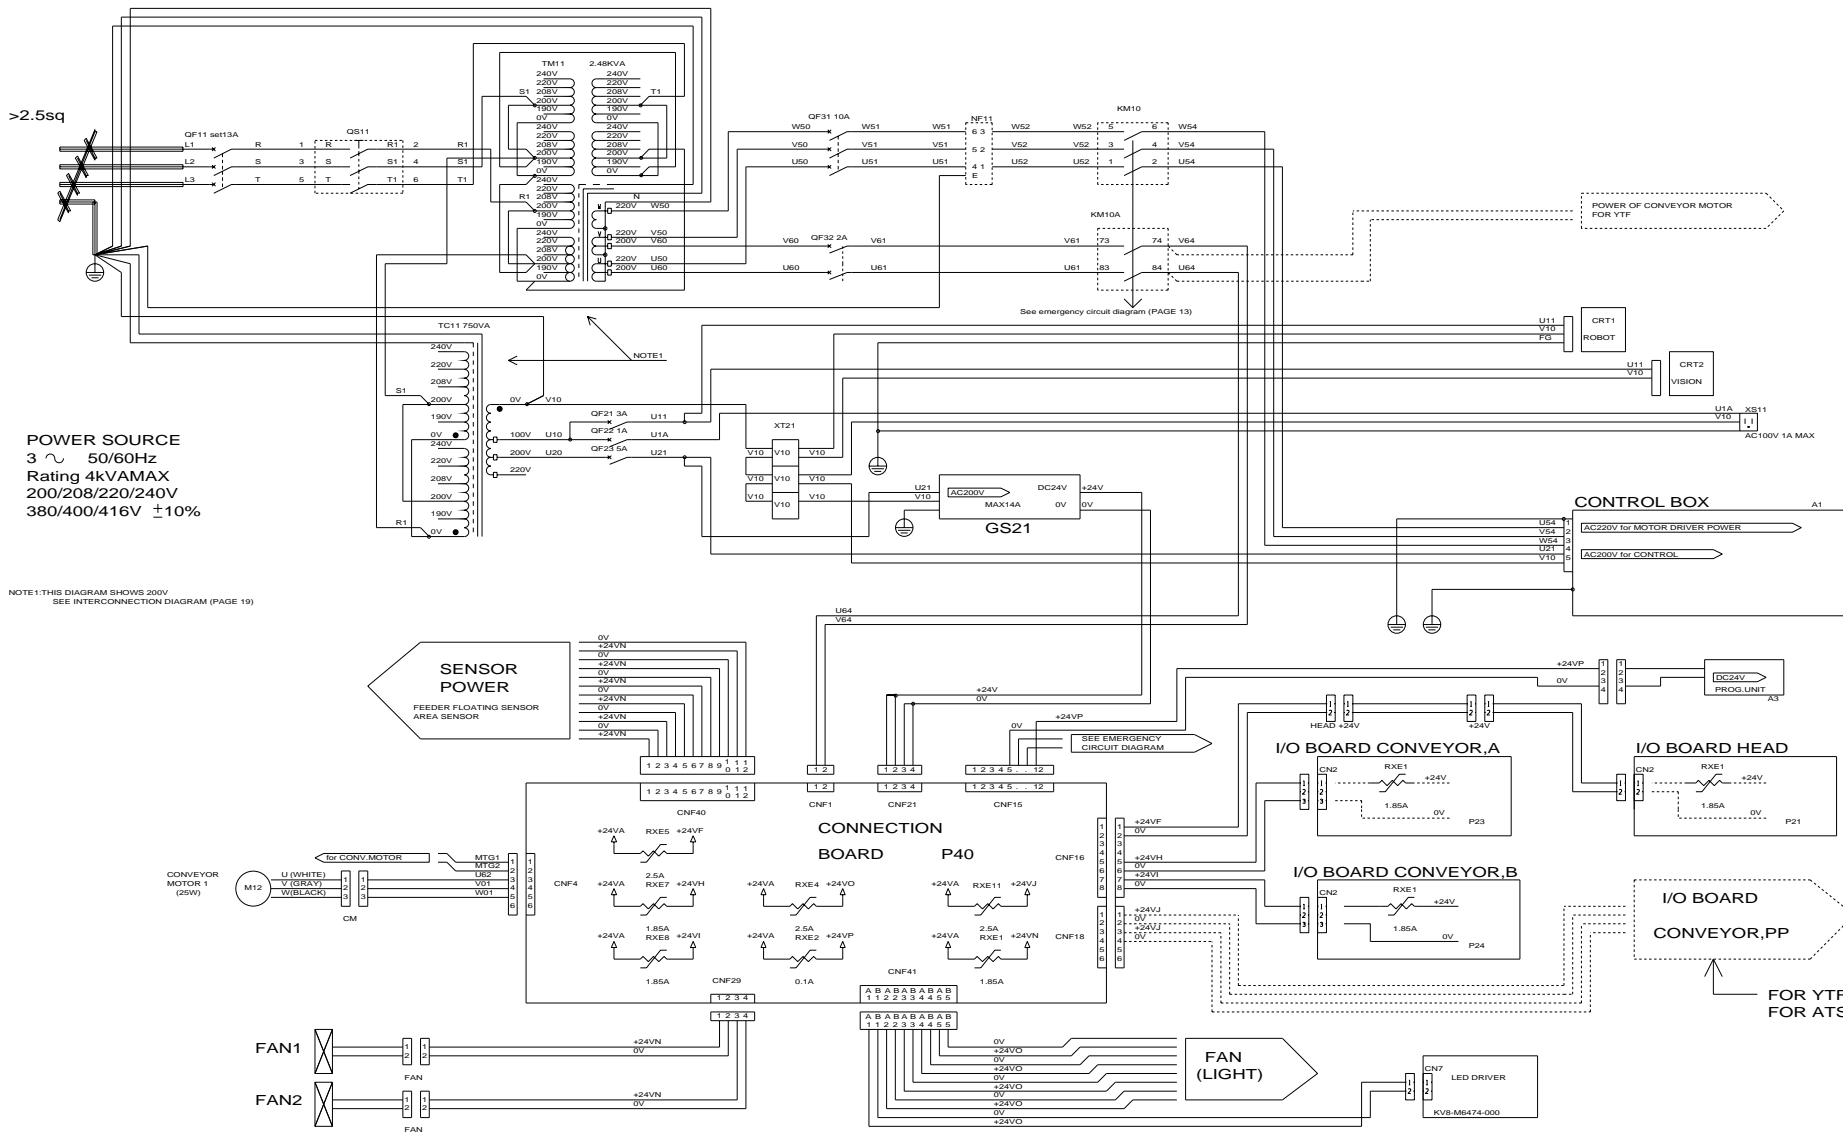

I/O wiring diagram (HEAD)

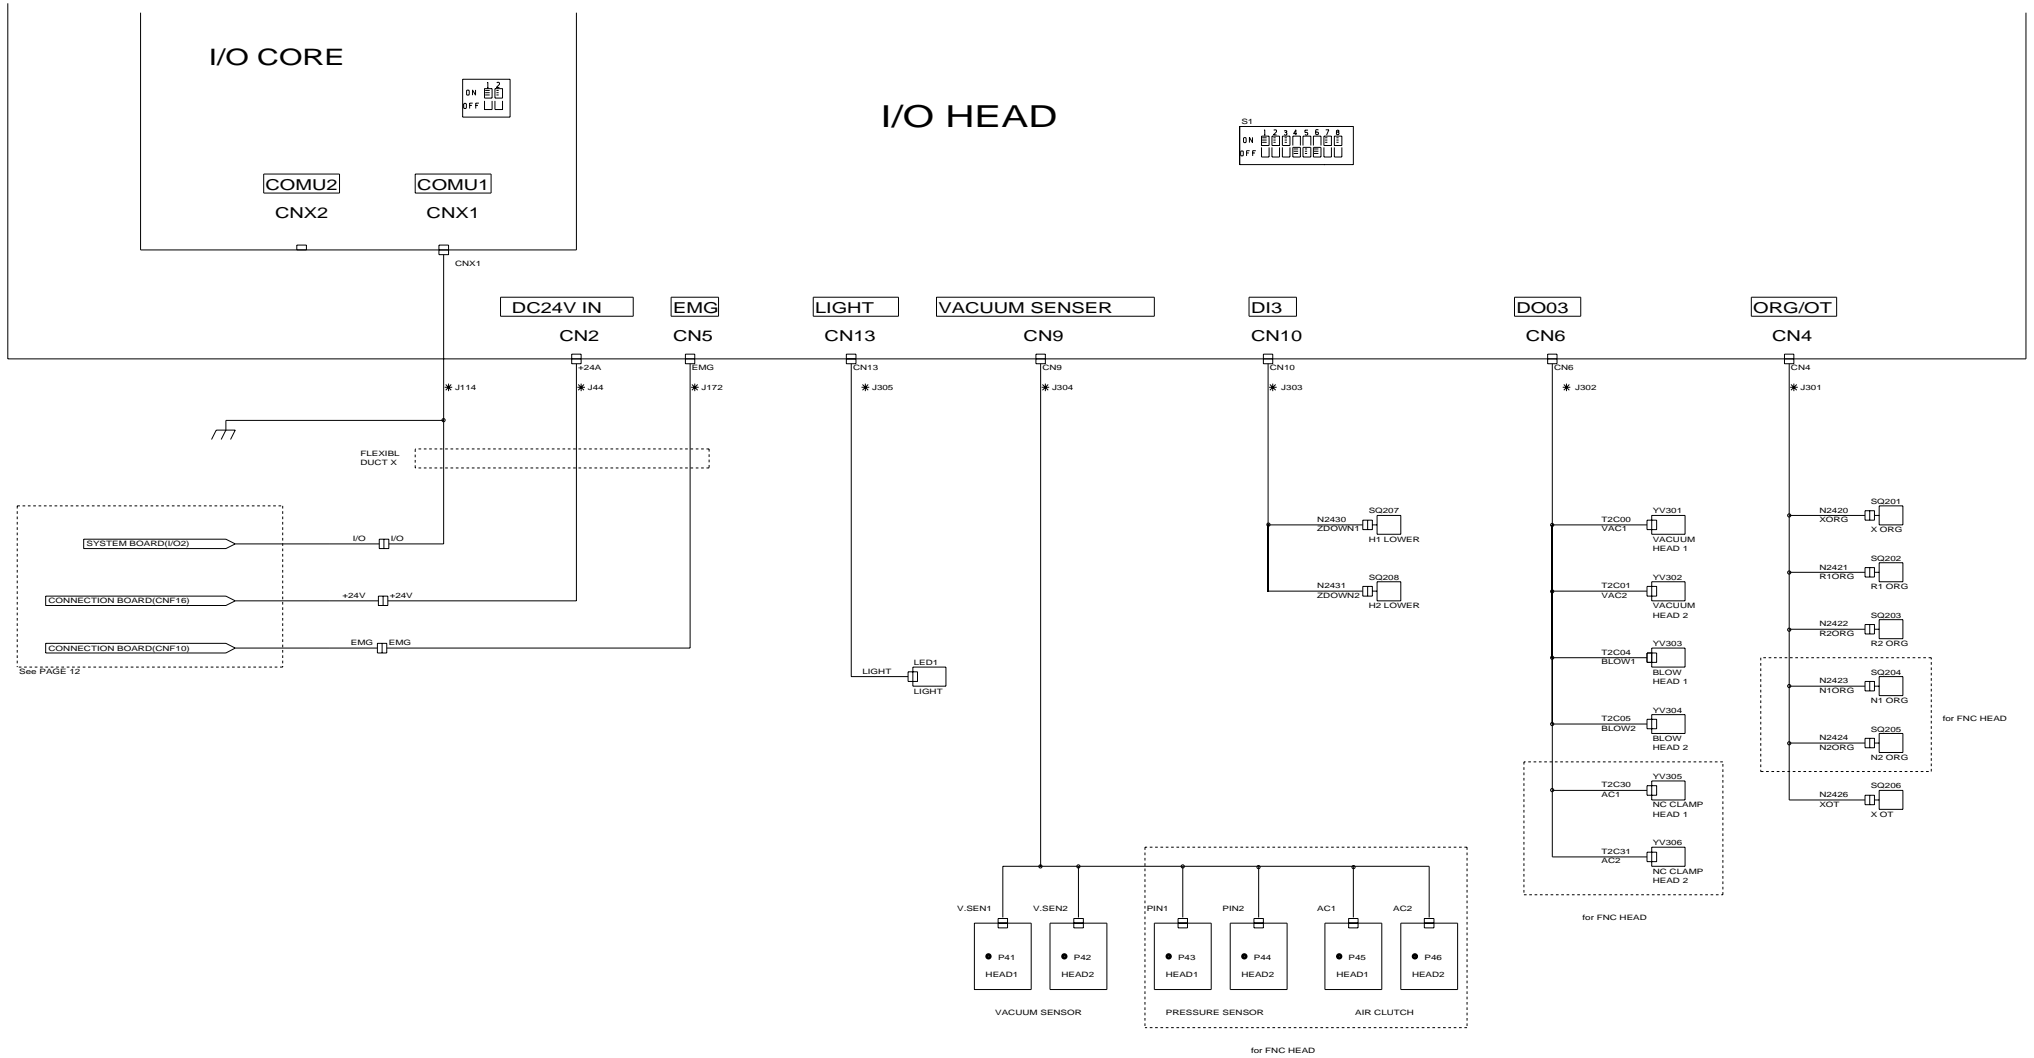


I/O wiring diagram (CONVEYOR B)

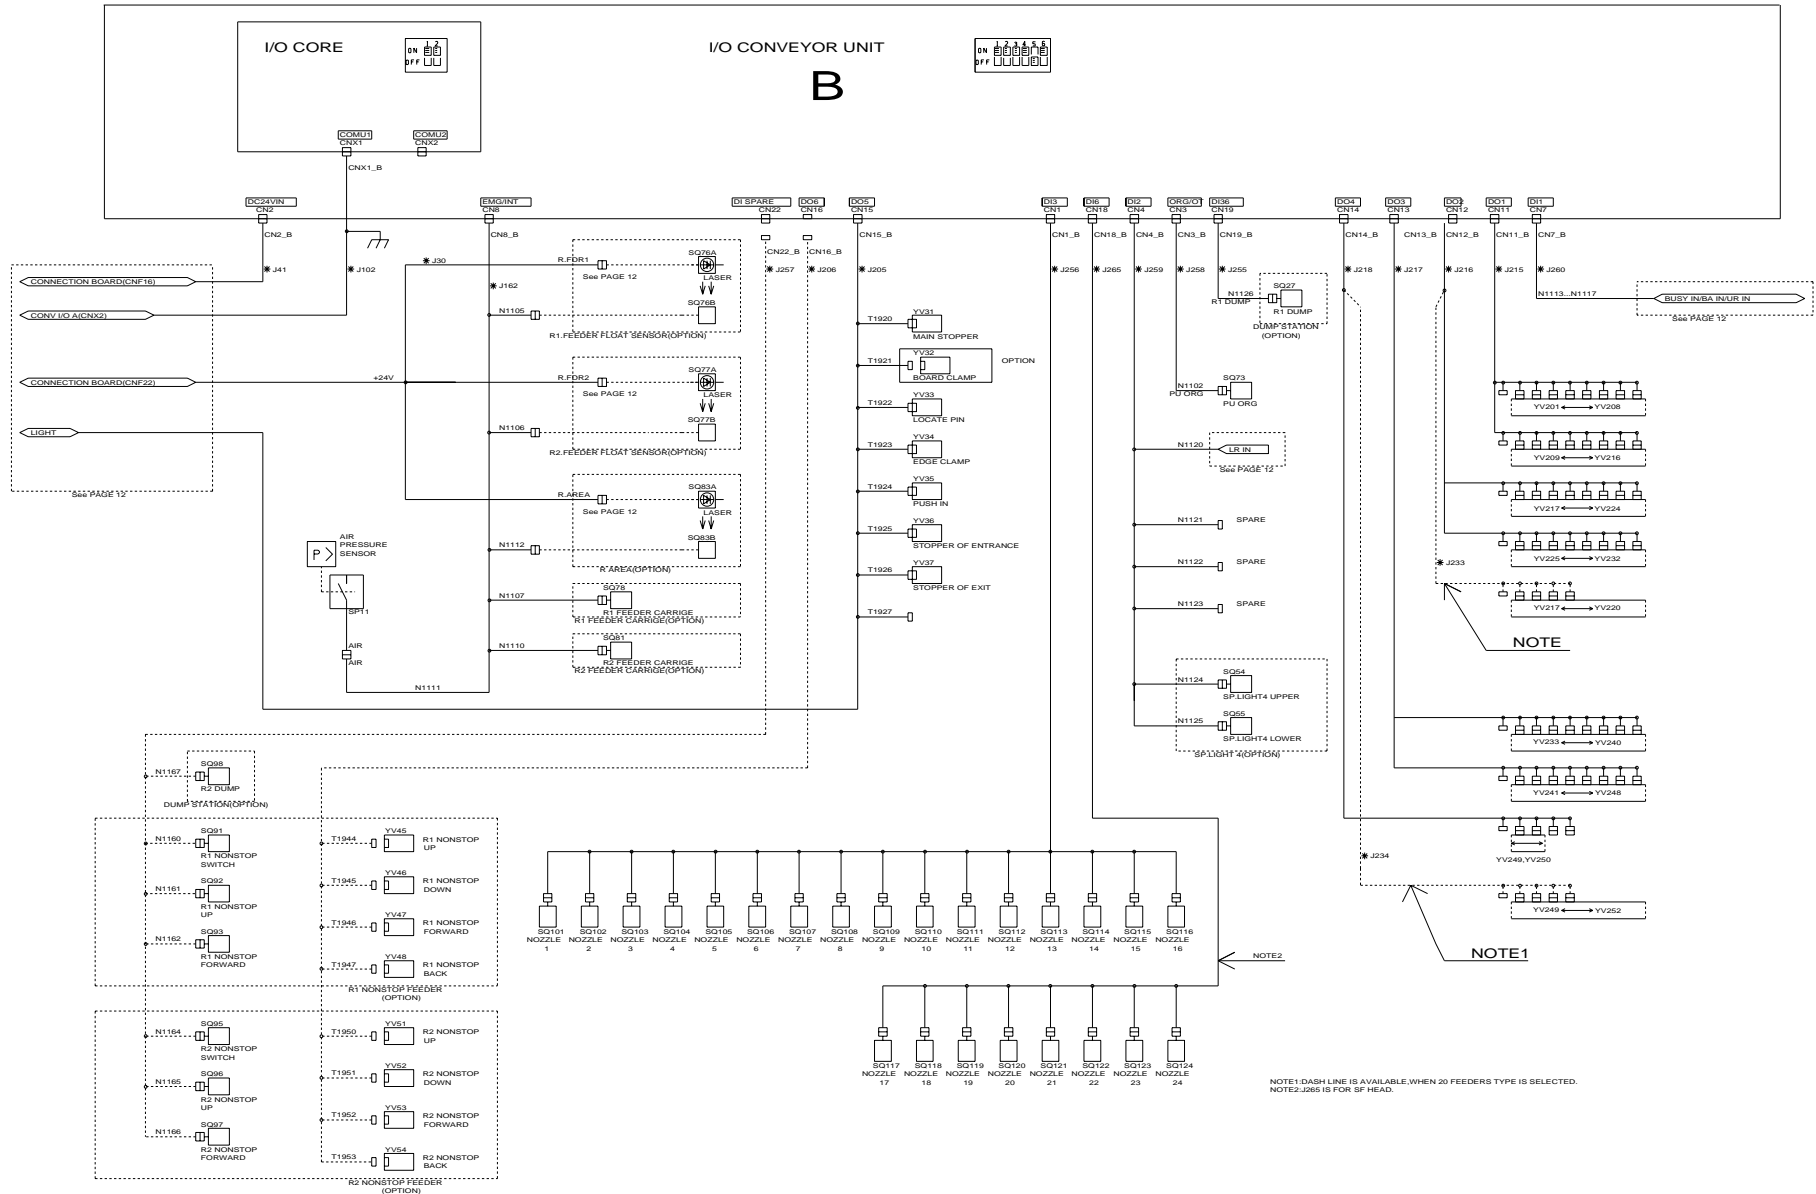


Transtap switching diagram

TM11: The selection of POWER SOURCE

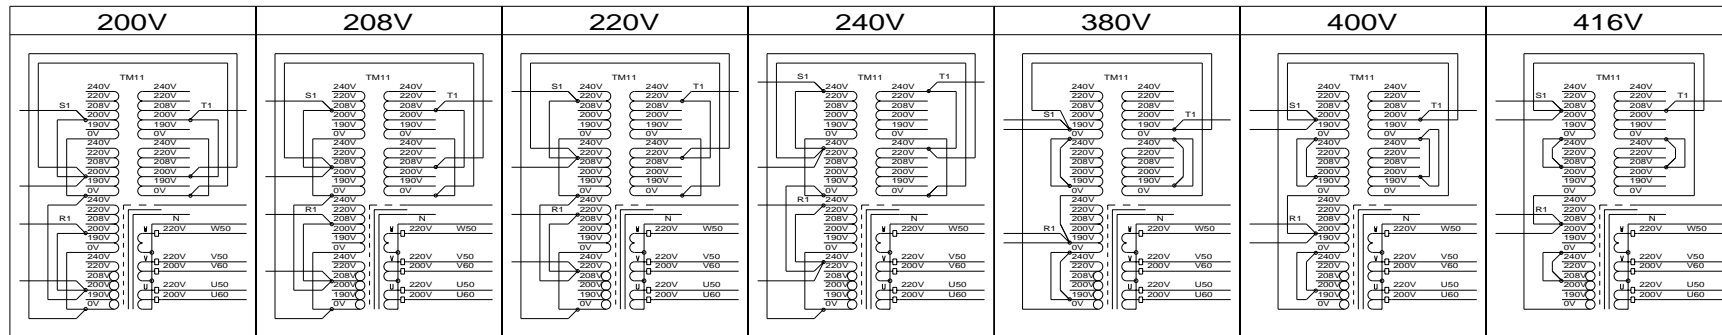

TC11: The selection of POWER SOURCE

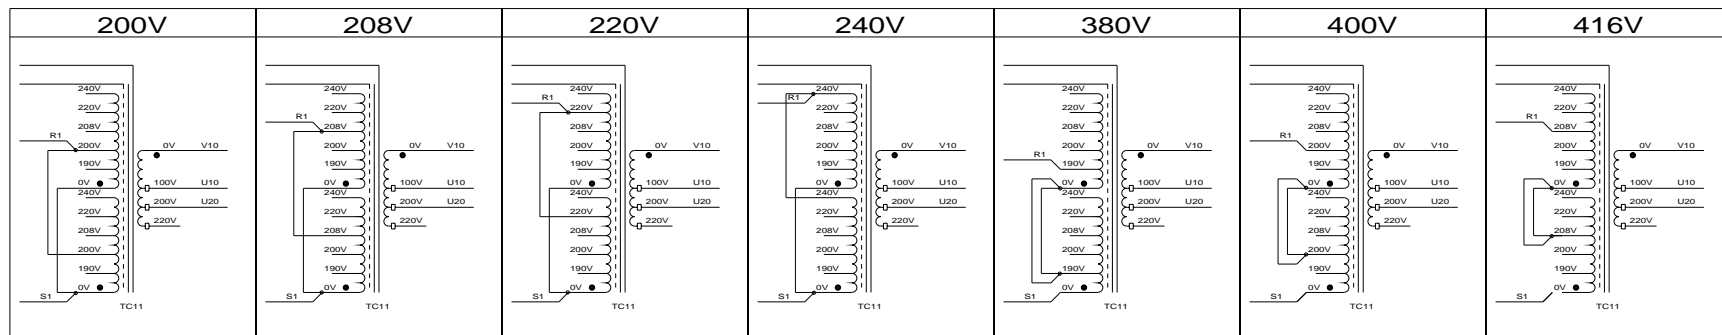

No	Part No.	Part Name	Q'ty	Remarks
1	KG2-M536A-01X	HNS 301 (FG 450)	1	J82
2	KG2-M536A-22X	HNS,PE 150	6	J83,J84,J85,J86,J87,J88
3	KG2-M663R-00X	HNS 3-11 :J61/J62	2	J61,J62
4	KG2-M664H-00X	HNS 4-5 (SERIAL1)	1	J113
5	KG2-M669G-01X	HNS,9-4	1	J202
6	KH1-M536E-32X	HNS 302 (FG 850 FLEX	1	J92
7	KH4-M664L-03X	HNS 4-8 (FDD)	1	J110
8	KH4-M664N-01X	HNS.4-10(SERIAL2)	1	J120
9	KH4-M668R-00X	HNS 8-11 (SW LIMIT C	2	J163,J164
10	KH5-M536E-11X	HNS 302 (FG 500 FLEX	1	J74
11	KK1-M664J-01X	HNS,PE 1000	5	J77,J78,J79,J80,J89
12	KK1-M667E-00X	HNS 7-2 (SW EMG)	2	J165,J166
13	KM0-M536A-01X	HNS,PE 70	2	J90,J91
14	KM5-M661E-00X	HNS,1-2 (QF11-TM11)	1	J3
15	KM5-M661Y-00X	HNS,1-17 (PWR,CRT)	1	J50
16	KM5-M662K-00X	HNS,2-7 (CNECT,CNF15	1	J29
17	KM6-M661G-00X	HNS,1-4 (TM11-TC11)	1	J4
18	KM6-M661J-00X	HNS 1-6 (TM11-QF31)	1	J14
19	KM6-M661K-00X	HNS 1-7 (QF31-NF11)	1	J15
20	KM6-M661L-00X	HNS 1-8 (NF11-KM11)	1	J18
21	KM6-M661Y-00X	HNS,POWER CRT	1	J49
22	KM6-M66L2-03X	HNS,PE 1600	1	J81
23	KM6-M66M1-10X	HNS 18-1 (TAP CHANGE	10	J601, J602, J603, J604, J605, J606, J607, J608
24	KM6-M66M1-20X	HNS 18-1 (TAP CHANGE	1	J609
25	KM6-M66M4-00X	HNS 18-4 (JUMPER)	2	J612,J613
26	KU0-M663N-00X	HNS,3-10 (CAPACITOR)	1	J52
27	KV0-M664M-00X	HNS 4-9	1	J111
28	KV6-M662T-00X	HNS 2-12(OT,HEAD)	1	J172
29	KV6-M664G-00X	HNS,CMN HEAD	1	J114
30	KV8-M666L-00X	HNS 6-8	2	J149,J150
31	KV7-M661H-00X	HNS 1-5(TC11-QF**,XT	1	J11
32	KV7-M661W-00X	HNS 1-15(PWR,HEAD I/	1	J44
33	KV7-M662A-01X	HNS,2-1(SENSOR POWER	1	J30
34	KV7-M662Y-00X	HNS 2-17(CONN,CNF21)	1	J48
35	KV7-M663M-00X	HNS 3-9(CONNECT,CNF4	1	J58
36	KV7-M665A-00X	HNS,5-1(PI N)	1	J121
37	KV7-M665E-00X	HNS,5-2(PI R1,R2)	1	J122
38	KV7-M665G-00X	HNS 5-4PI Z1,Z2,W)	1	J124

No	Part No.	Part Name	Q'ty	Remarks
39	KV7-M665H-00X	HNS 5-5(Y-FLEX PI R,	2	J126,J127
40	KV7-M665J-00X	HNS 5-6(PI X,Z1,Z2)	1	J125
41	KV7-M665K-00X	HNS 5-7(X-FLEX PI N)	1	J130
42	KV7-M665L-01X	HNS,5-8(XFLEX PI)	1	J128
43	KV7-M665U-10X	HNS,5-13	1	J135
44	KV7-M666A-00X	HNS 6-1(MO N1,N2)	1	J141
45	KV7-M666E-00X	HNS 6-2(MO R1,R2)	1	J142
46	KV7-M666G-00X	HNS 6-4(MO Z1,Z2,W)	1	J144
47	KV7-M666J-00X	HNS,Y-FLEX ZRNM	3	J146,J147,J148
48	KV7-M666K-00X	HNS,6-7(X-FLEX NM)	1	J151
49	KV7-M66A2-00X	HNS,10-2(DI,HEAD)	1	J301
50	KV7-M66A3-01X	HNS,10-3(VALUE,HEAD)	1	J302
51	KV7-M66A4-00X	HNS,10-4(DI HEAD)	1	J303
52	KV7-M66A5-00X	HNS,10-5(DI,VAC)	1	J304
53	KV7-M66A7-00X	HNS,10-7(FID)	1	J306
54	KV8-M536E-10X	HNS 302	2	J71,J73
55	KV8-M665K-00X	HNS 5-7(X-BEAM,PI X)	1	J129
56	KV8-M661J-00X	HNS 1-6(TM11-QF32)	1	J16
57	KV8-M661N-00X	HNS,1-10(QF40-KM10A)	1	J19
58	KV8-M661R-00X	HNS 2-11(OUTLET)	1	J26
59	KV8-M661U-00X	HNS,CNF16	1	J41
60	KV8-M661V-00X	HNS 1-14(PWR,HEAD I/	1	J43
61	KV8-M662A-00X	HNS,2-1(KM12,QF22,XT	1	J21
62	KV8-M662G-00X	HNS 2-4(CONNECT,CNF1	1	J24
63	KV8-M662N-00X	HNS,CONNECT CNF10	1	J170
64	KV8-M662R-00X	HNS,2-11(OT,HEAD)	1	J171
65	KV8-M662X-00X	HNS,2-16(PWR,IO)	1	J47
66	KV8-M663A-00X	HNS,3-1 (PWR,MTR)	1	J51
67	KV8-M663T-00X	HNS SPEED CONTROL	1	J63
68	KV8-M664A-00X	HNS 4-1(CMN,I/O CV A	1	J101
69	KV8-M664E-01X	HNS,4-2(CMN,HEAD)	1	J109
70	KV8-M664F-00X	HNS 4-3(CMN,I/O AB)	1	J102
71	KV8-M664J-00X	HNS 4-6(I/O CMN Y-FL	1	J108
72	KV8-M665F-10X	HNS,5-3	1	J123
73	KV8-M665M-00X	HNS 5-9(PI W)	1	J131
74	KV8-M665V-10X	HNS,5-14	1	J134
75	KV8-M666F-00X	HNS,6-3	1	J143
76	KV8-M666H-00X	HNS,6-5(Y-FLEX XM)	1	J145
77	KV8-M667A-00X	HNS,7-1 (INT,A)	1	J161

No	Part No.	Part Name	Q'ty	Remarks	No	Part No.	Part Name	Q'ty	Remarks
78	KV8-M667E-00X	HNS,7-2 (INT,B)	1	J162	117	KM7-M66F0-00x	C.CAMARA ASSY L5M	1	J502/(J503):Area
79	KV8-M667F-00X	HNS 7-3(EMG)	1	J167	118	KV7-M66F6-00x	C.CAMERA ASSY L7.7M	1	J501/J510:Camera 1
80	KV8-M667G-00X	HNS 7-4(Y1 OT)	1	J168	119	KV7-M66F2-00x	C.CAMARA ASSY L6M	1	J501
81	KV8-M667L-00X	HNS,7-8	1	J22	120	KV7-M66F4-00x	C.CAMERA ASSY L1.7M	1	J510
82	KV8-M668A-01X	HNS,8-1(DI,CONV)	1	J181					
83	KV8-M668E-01X	HNS,D0 1A	1	J252					
84	KV8-M668F-00X	HNS,8-3(DI,DUMP 1/2)	2						
85	KV8-M668G-XXX	HNS,DI DUMP SEL.	2						
86	KV8-M668G-20X	HNS,8-4(DI,DUMP 3/4)	2						
87	KV8-M668G-20X	HNS,8-4(DI,DUMP 3/4)	1						
88	KV8-M668J-01X	HNS,8-6	1	J220					
89	KV8-M668L-01X	HNS,8-8(DI 2A)	1	J254					
90	KV8-M668M-01X	HNS,NOZZLE STATION	1	J256					
91	KV8-M668N-01X	HNS,DI 2B	1	J259					
92	KV8-M668T-00X	HNS 8-12(PU,ORG)	1	J258					
93	KV8-M668U-01X	HNS,8-13	1	J260					
94	KV8-M669E-00X	HNS 9-2(PATLITE)	1	J219					
95	KV8-M669J-00X	HNS,DO 5B	1	J205					
96	KV8-M669N-00X	HNS,9-10(DO CONNECTI	1	J203					
97	KV8-M669T-02X	HNS,DO 6	1	J204					
98	KH4-M66F5-01X	HNS,12-5 (VGA_4.5M)	1	J112,J115					
99	KU8-M66F5-30X	HNS,12-5 (VGA_3M)	1	J112					
100	KU8-M66F5-10X	HNS,12-5 (VGA_1.5M)	1	J115					
101	KV8-M66F6-00X	HNS 12-6	1	J505					
102	KV8-M66K8-01X	HNS,16-8(SMEMA PRE)	1	J222					
103	KV8-M66K9-02X	HNS,16-9	1	J201					
104	KV8-M66L1-00X	HNS 17-1(700)	1	J72					
105	KM6-M669W-00X	HNS,9-15	1	J506					
106	KV8-M669X-10X	HNS,9-16	1	J40					
107	KV5-M6601-000	HARNESS,1	1						
108	KH2-M661A-201	HNS 1-1 (EMG PP CONN	1	J690					
109	KH2-M661E-001	HARNESS 1-2	1	J691					
110	KH2-M661F-101	HNS,1-3	1	J692					
111	KH2-M661G-101	HNS,1-4	1	J693					
112	KV5-M661H-000	HNS 1-5(MO3)	1	J694					
113	KV5-M661J-010	HNS 1-6(+24V PP CONN	1	J695					
114	KV5-M661K-000	HNS 1-7(MO4)	1	(J696:YTF80W)					
115	KV5-M663A-011	HNS,3-1(P.CONV MAIN)	1	(J697:YTF80W)					
116	KV8-M66F0-00x	C.CAMERA ASSY L5M	1	J504/(J503):Multi					



IM COMPANY

882 Soude Hamamatsu, Shizuoka
435-0054, Japan
Telephon 81-53-460-6126
Facsimile 81-53-460-6145